

GENERAL CATALOG

FOR MORE INFORMATION PLEASE CONTACT:



BHAGWATI
Hardware & Mill Store Since 1976

Address: 4769, 1ST Floor, Old Post Office Building,
Hauz Qazi, Delhi - 110006
Mobile: 9212012856, 9350076343
Website: www.bhagwathardware.com
www.bhagwathardwaredelhi.in
E-mail: sandeep@bhagwatimail.com

AN ISO 9001 : 2015 CERTIFIED COMPANY

CEDAR®

Torque Tester DWT-200

Torque wrench



Simple model for torque wrench management

DWT-200 is a torque tester which is ideal for daily inspections of torque wrench.

Features

- Easy-to-see high brightness LED
- Ideal for work training

PP Mode	Measure the maximum torque
PD Mode	Measure the torque when feel a click

- Powered by dry cell battery

Ordering number


Model - Destination

Model	DWT-200
Measurement Range	7.0~200.0 N·m
Accuracy	±0.5% (If 499 digit or less, ±3 digit.)
Power	Dry cell battery
Dimensions	200(W) × 120(D) × 96(H)
Accessories	Conversion adapter BAE-34 Dry cell battery (4 pieces)

It is the best for everyday check of a torque wrench.

Torque wrench tester DWT-200

A torque tester special maker sends to you by the simple specification.

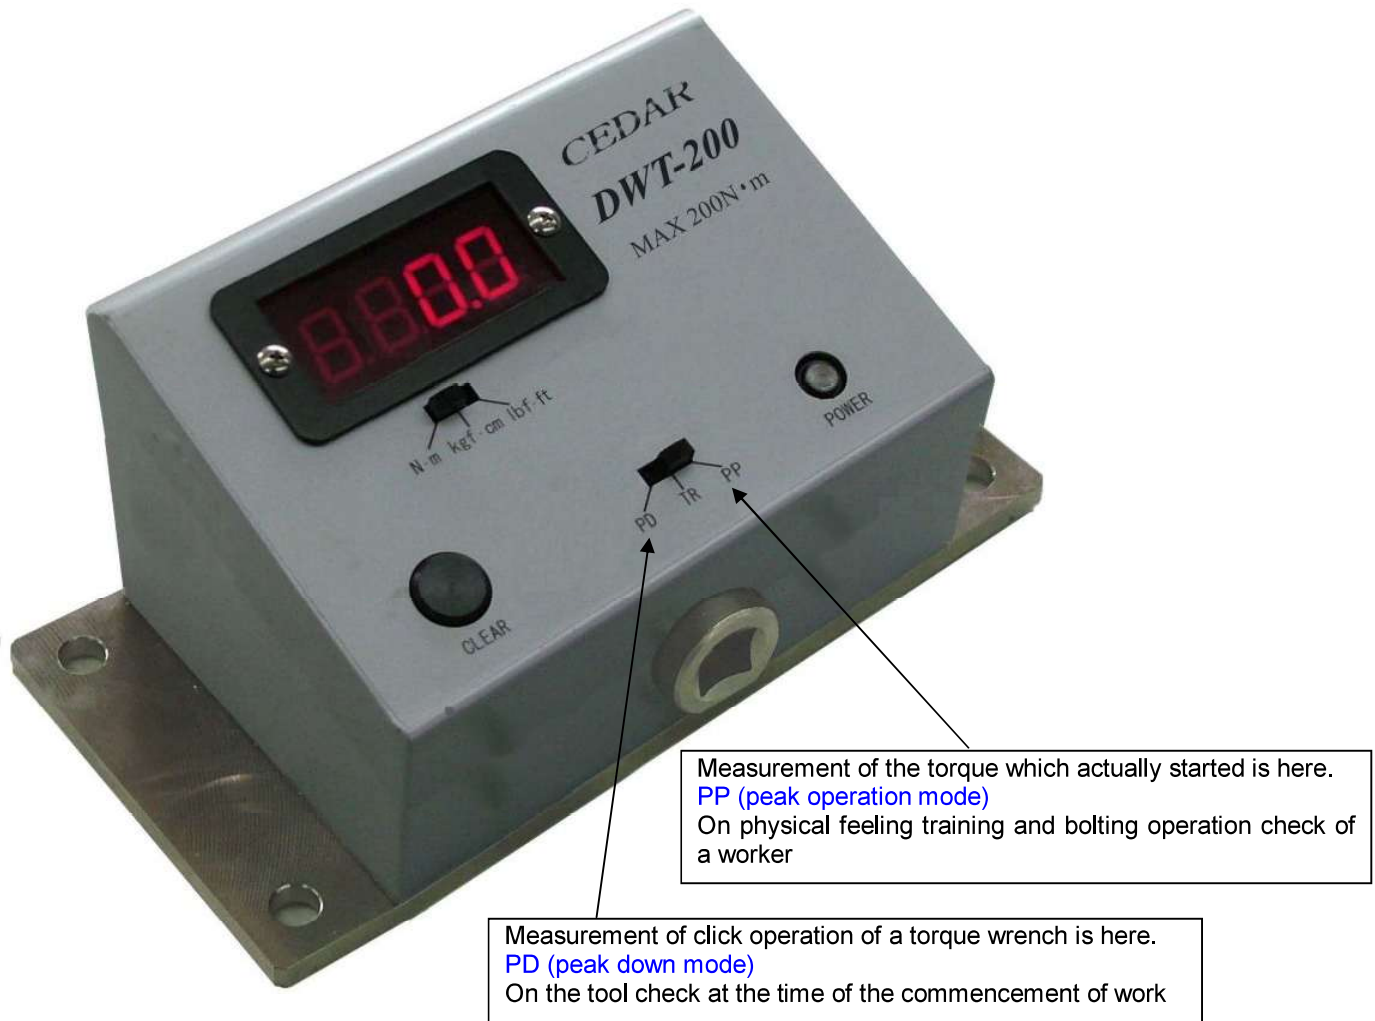

**The check of torque of operation is made in easy operation.
An LED type with a legible display**

Measuring method

(in the case of a torque wrench operation torque check)

- (1) Fix Tester Firmly.
- (2) Switch on Power Source and Check Measurement Mode PD (Slide Switch).
- (3) Display "0" Check (when it is not Zero, Mode is Set to "TR" and CLEAR is Recommended Highly)
- (4) Insert Wrench in Detecting Element.
- (5) Bind Tight at a Stretch until Clutch Operates (it Does Not Rest on the Way).
- (6) Read Torque Display.

Specification

Form	DWT-200
Measuring range	7.0~200.0 N·m
Accuracy	±0.5% (499 or less digit)±3digit
The measurement direction	CW (right)
Measurement mode	Track and P-P (peak hold) P-D (peak down hold)
Auto-power-off	When not operating it for 5 minutes, it is power-source automatic OFF.
A power source and use time	Size AA battery Four Continuous duty About 20 hours (at the time of Alkaline battery use)
Detecting-element form	□12.7
Outside size · Weight	200(W) × 120(D) × 96(H) · About 2.6kg
Accessories	Angle drive adapter (□9.5 l- □12.7) An inspection report, a proofreading certificate, a traceability system figure

* About a data output, I correspond as an option.

At the time of spanner type torque wrench measurement, a hexagon-like adapter is required separately. (option)

* Click operation of a torque wrench, and actual torque

If a torque wrench becomes the set-up torque, torque will fall according to internal machine structure for a moment, and it will be transmitted at hand as a feeling of a click.


However, if load is made to open completely at this time (idling), since it is very dangerous, if after click operation applies load, torque will start as it is.

By the method of application, bigger torque than setting torque may start as a result.

At this tester, the check of the torque of a wrench of operation is detected by PD (peak down mode).

The torque which starts at the time of actual bolting can be checked in PP (peak operation mode).

You can use also for a check and training of bolting operation of each worker.

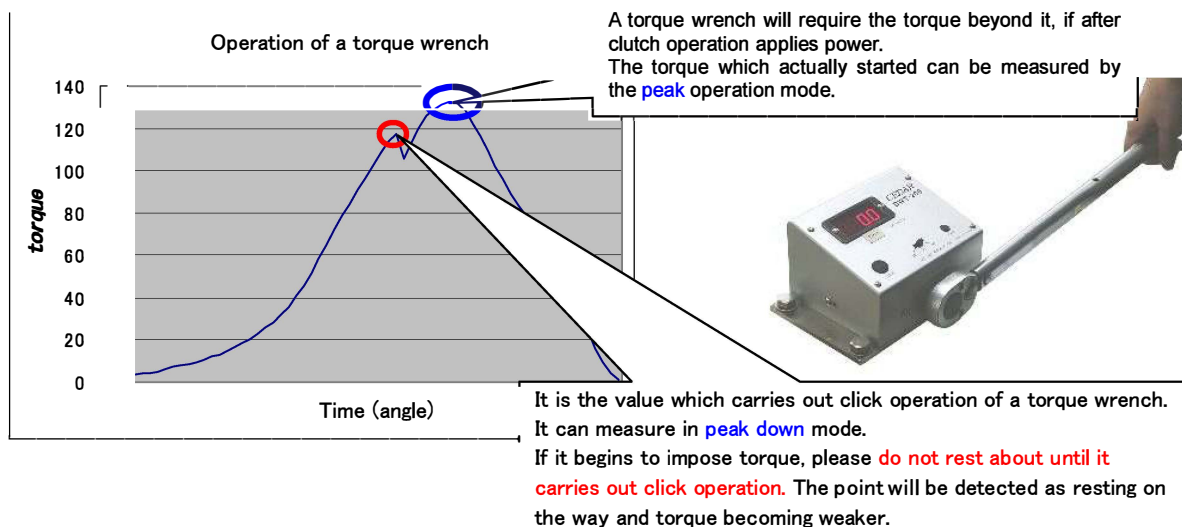

FOR MORE INFORMATION PLEASE CONTACT:



BHAGWATI

Hardware & Mill Store Since 1976

Address: 4769, 1ST Floor, Old Post Office Building,
Hauz Qazi, Delhi - 110006

Mobile: 9212012856, 9350076343

Website: www.bhagwathihardware.com
www.bhagwathihardwaredelhi.in

E-mail: sandeep@bhagwatimail.com

AN ISO 9001 : 2015 CERTIFIED COMPANY

SUGISAKI METER CO., LTD.